

Function:

- 1: can be equipped with an external pulse handles, with a number of
- 2: with the handle can automatically switch the computer and handle
- control, mutual non-interference
 3: automatically detect the computer automatically control the movement shielded handle control functions
- 4: number of significant track record computer data and handle control
- 5: automatic control function of the machine four-axis of the knife, no
- 6: up to 3.5A stepper motor drive current, adjustable.

- 6: up to 3.5A stepper motor drive current, adjustable.
 7: up to 16 segments, more accurate, run more smoothly.
 8: overload automatic protection function of the flow through the temperature, and fully protect your computer and peripherals
 9: bipolar constant-current chopper drive, low speed creeping
- phenomenon, noise, non-resonant region.

 10: a closed optical isolation, two-stage signal processing, to fully

- 10: a closed optical isolation, two-stage signal processing, to full protect your computer and equipment.

 11:1 the road 0-10V/PWM speed control signal output

 12: Rd input control can be set to limit, stop, points, knives, etc.

 13: drive, handle, and the number of significant corresponding identification function automatically




Intelligent keyboard keys Description

1: $X \ / \ Y \ / \ Z \ / \ A$ four-axis real-time control key

2: ST set and paging key

Finish to exit the settings button set $3:\ \mathrm{SPI}$

- 4:1 normal for five-axis +, set the state for the linefeed 5:2 normal for five-axis set the state for function
- 6: DO / UP for digital subtraction
- 7: CL clear display axis values, the four-axis can independently clear

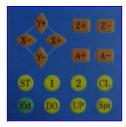

Professional keyboard keys description

- 1:0-9 number keys, real-time input of set values
- 2: X / Y / Z / A four-axis real-time control key
- 3: ST set and paging key
- 5. 38 set and paging key 4: 0K to exit the setup key for the setup is complete 5: B1 normal for five-axis +, set the state for the linefeed 6: B2 normal in five-axis set the state for function
- 7: CL clear display axis values, the four-axis can independently clear

Continuous = press the axis key has been running, release to stop

Single-step = what shaft key operation 0.1MM stop

Four-axis independent of the Settings page, refer to the Y-axis settings icon